

Raspberry Pi Enterprise Network WiFi Bridge

By: Riley Barrett and Dylan Halland

The goal of this project is to allow an IoT device, such as a Weemo Smart Plug, Amazon Echo, Gaming Console, or any other Wi-Fi enabled device to connect to a WPA_EAP Enterprise Network by using a Raspberry Pi Zero W as a packet forwarding device. Extra configuration steps are required for devices connecting to an enterprise network, and many devices are not compatible at all. By using a Wi-Fi Bridge, any device can easily obtain internet access by connecting to the Pi.

The system can be implemented on either one wireless card or two separate cards depending on the requirements of the user. For systems requiring higher signal strength and faster upload/download speeds, it is best to use a dedicated wireless card to host the access point. However, for systems where the signal strength and bandwidth are less important, or where a more cost effective solution is desired, a single card can be shared by the access point and network connection.



Raspberry Pi Enterprise Network WiFi Bridge: Page 1

Step 1: Setting Up the Raspberry Pi

Begin by connecting your Pi to a keyboard and monitor (may require an HDMI adapter).

Then, you can begin by typing the command:

sudo su

This will ensure you have the necessary privileges to modify files on the pi.

Now you will want to install dnsmasq and hostapd using the command:


apt-get install dnsmasq hostapd

You can now begin to setup the WiFi bridge.

NOTE - The following tutorial will contain information for those using the single on-board wireless card for both the access point and for connecting to the network. It is also possible to configure the system to run on two separate cards. To do this, simply look for the commented out "wlan1" lines in the provided files, and substitute them for the neighboring "ap0" lines.



Step 2: 70-persistent-net.rules

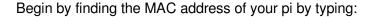

iw dev

Create the following file:

nano /etc/udev/rules.d/70-persistent-net.rules

and edit it so that it contains the following

SUBSYSTEM=="ieee80211", ACTION=="add|change", ATTR{macaddress}=="b8:27:eb:c0:38:40", KERNEL=="phy0", \
br> RUN+="/sbin/iw phy phy0 interface add ap0 t ype __ap", \
RUN+="/bin/ip link set ap0 address b8:27:eb:c0:38:40"

This file tells the system to allocate a device for the access point at boot. Here, the MAC address should be replaced with that of your own pi, which you just found.

(Two Wireless Cards) This file is not required when using two wireless cards.

Step 3: Hostapd.conf

Next, you will then edit the hostapd.conf file by entering the following:

nano /etc/hostapd/hostapd.conf

Modify the file so that it matches the following configuration:

 $ctrl_interface=|var/run/hostapdctrl_interface_group=0#interface=ap0interface=wlan1driver=nl80211soid=testnethw_mode=gchannel=6wpa_passphrase=0123456789wpa_key_mgmt=WPA-PSKwpa_pairwise=TKIP CCMPrompairwise=CCMP$

Note that while my channel here is set to 6, you may need to change this value to match the channel that wlan0 is on. On some networks, the channel will automatically be changed for the access point to match wlan0, but this was not my experience on the enterprise network. You can check which channels are currently in use and by which interfaces by typing

iwlist channel

(Two Wireless Cards) Simply uncomment the line containing wlan1 and comment out the one containing ap0.

Step 4: Dnsmasq.conf

Now you will edit the dnsmasq.conf file:

```
nano /etc/dnsmasq.conf
```

Uncomment or add the following lines:

```
interface=lo,ap0
#interface=lo,wlan1
no-dhcp-interface=lo
bind-interfaces
server=8.8.8.8
domain-needed
bogus-priv
dhcp-range=192.168.2.100,192.168.2.200,12h
```

You can use your own subnet here if you would like, just be sure that you are consistent.

(Two WirelessCcards) Uncomment the line containing wlan1, and comment out the one containing ap0.

Step 5: Interfaces

Next, you will need to modify the interfaces file:

nano /etc/network/interfaces auto lo auto ap0 #auto wlan1 auto wlan0 iface lo inet loopback iface eth0 inet dhcp allow-hotplug ap0 #allow-hotplug wlan1 iface ap0 inet static #iface wlan1 inet static address 192.168.2.1 netmask 255.255.255.0 hostapd /etc/hostapd/hostapd.conf allow-hotplug wlan0 iface wlan0 inet dhcp pre-up wpa supplicant -B -Dwext -i wlan0 -c/etc/wpa supplicant/wpa supplicant.conf post-down killall -q wpa_supplicant

It is worth noting that the wlan0 interface MUST come after whatever interface you are forwarding to it, otherwise the system will not work properly.

(Two Wireless Cards) Uncomment any lines containing wlan1 and comment out any containing ap0.

Raspberry Pi Enterprise Network WiFi Bridge: Page 4

Step 6: Wpa_supplicant.conf

Now you will modify the wpa_supplicant.conf file found at:

```
nano /etc/wpa_supplicant/wpa_supplicant.conf
```

Some networks are configured differently than others so this part may require some tinkering, here is the wpa_supplicant.conf file that allowed me to connect to the network at Cal Poly:

```
country=US<br/>country=US<br/>config=1<br/>
network={<br/>
ssid="SecureMustangWireless"<br/>
scan_ssid=1<br/>
key_mgmt=WPA-EAP<br/>
pairwise=CCMP TKIP<br/>
group=CCMP TKIP<br/>
eap=PEAP<br/>identity="username@calpoly.edu"<br/>
password="your_password"<br/>
phase1="peapver=0"<br/>
phase2="MSCHAPV2"<br/>
}
```

This file is used to configure wlan0 to connect to your enterprise network. Some enterprise networks require a CA Certificate in order to connect. Cal Poly's campus network does not require a certificate, so I have skipped this portion, but you can easily download the proper certificates and add them to your wpa_supplicant file with the line

ca_cert="/path/to/cert.pem"	

Step 7: Hostapdstart Script

The last thing left to do is write a script that starts both interfaces and sets up the packet forwarding when the system boots. Creat a file called hostapdstart by typing:

```
nano /usr/local/bin/hostapdstart
```

Add the following to the file

This script brings down both interfaces, then brings them back up in the proper order, tells the pi that you would like to forward packets from one interface to another, and finally restarts dnsmasq so that the changes will take affect.

(Two Wireless Cards) uncomment line with wlan1 and comment out line with ap0.

Step 8: Rc.local

Finally, we want the system to start when the system boots, so we will modify the rc.local file, which is run at boot:

```
nano /etc/rc.local
```

Simply add the following line to the end of the file:

```
hostapdstart>1&
```

Your file should look something like this:

```
_IP=$(hostname -I) || true

if [ "$_IP" ]; then

printf "My IP address is %s\n" "$_IP"

fi

hostapdstart>1&

exit 0
```

Step 9: Reboot

And that's it! Now, assuming you have everything setup correctly, and your WiFi dongle is attached (if you are using one), you simply need to reboot your Raspberry Pi with the command:

reboot

Once your Pi has successfully rebooted, you should be able to see the name of your Access Point on any device (phone, laptop, etc.). Once you connect using your specified password, it should connect you directly to your desired Enterprise network!

Special thanks to the following links for providing us with an idea of how to approach this project:

- https://blog.thewalr.us/2017/09/26/raspberry-pi-ze...
- https://www.raspberrypi.org/forums/viewtopic.php?p...
- https://www.raspberrypi.org/forums/viewtopic.php?f...

Let us know if you have any questions, comments, or suggestions!